TOYOTA 3F-E ENGINE REPAIR MANUAL SUPPLEMENT

NOTE: The following screen toning letters sections refer to the 3F Engine Repair Manual (Pub. No. 36253E)

INTRODUCTION	IN
ENGINE MECHANICAL	EM
EFI SYSTEM	FI
COOLING SYSTEM	CO
LUBRICATION SYSTEM	LU
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	СН
SERVICE SPECIFICATIONS	A
STANDARD BOLT TORQUE SPECIFICATIONS	В
SST AND SSM	С