



## TECHNICAL SERVICE INFORMATION

**REF:** HEATING & AIR  
CONDITIONING  
**NO:** AC003-96  
**DATE:** JUNE 7, 1996  
**MODEL:** ALL MODELS

Title **A/C COMPRESSOR MAINTENANCE FOR STORED VEHICLES**

Page 1 of 1

When a vehicle is stored for a long period, the volume of oil in the A/C compressor may decrease due to oil flow into the condenser, pipes, etc.

If the A/C system is turned on at high engine RPM after a long storage period, A/C compressor damage may result.

To minimize the possibility of damage to the A/C compressor while storing a vehicle, perform the following recommended procedure at least once a month to lubricate the compressor.

### **RECOMMENDED PROCEDURE FOR A/C COMPRESSOR LUBRICATION:**

1. Turn off A/C And blower switches prior to starting engine.
2. Start and warm-up engine until engine speed drops below 1,000 RPM.
3. Turn on the A/C system using the following settings:
  - A/C switch: On
  - Blower Speed: High
  - Engine speed: Below 1,000 RPM
4. Keep A/C on with engine idling for 30 seconds.
5. Turn off A/C system and stop engine.