

## Technical Service Information


Title **DOM FUSE INSTALLATION DURING PDS ON LX 450**

Page 1 of 1

To minimize battery discharge during transportation and storage the Dome Fuse has been removed at the assembly plant.

### INSTALLATION PROCEDURE:

The removed Dome Fuse (10A) is stored in the Relay Block No. 2 Cover in the engine compartment as shown in Figure A.

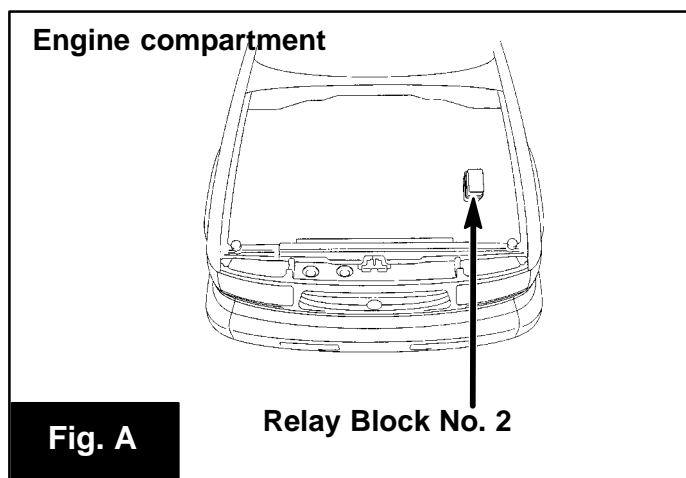

Please install the Dome Fuse in the correct position during Pre-Delivery Service (PDS) as shown in Figure B.

NOTE: If the vehicle is stored at the dealership for a long period of time after PDS, please disconnect the negative battery terminal to prevent battery discharge and refer to TSIB EL95-002 for battery maintenance information.

